



BUVA Atlas Poly Ultra[®] Montagehandleiding










BUVA Atlas Poly Ultra binnendraaiend

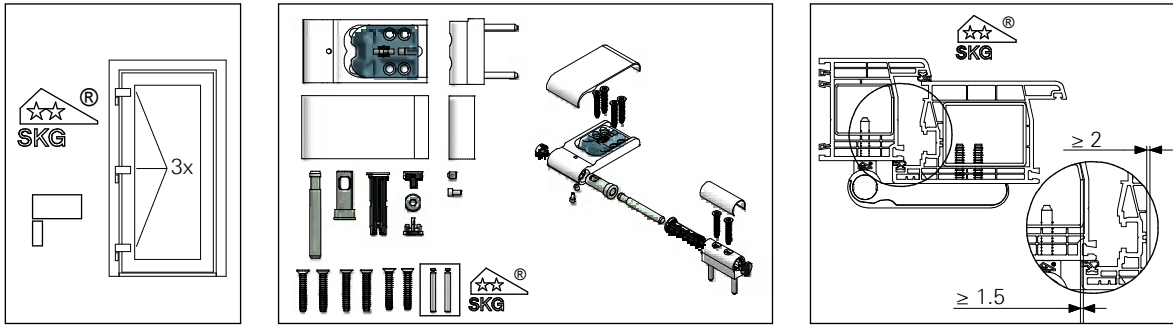





Montage

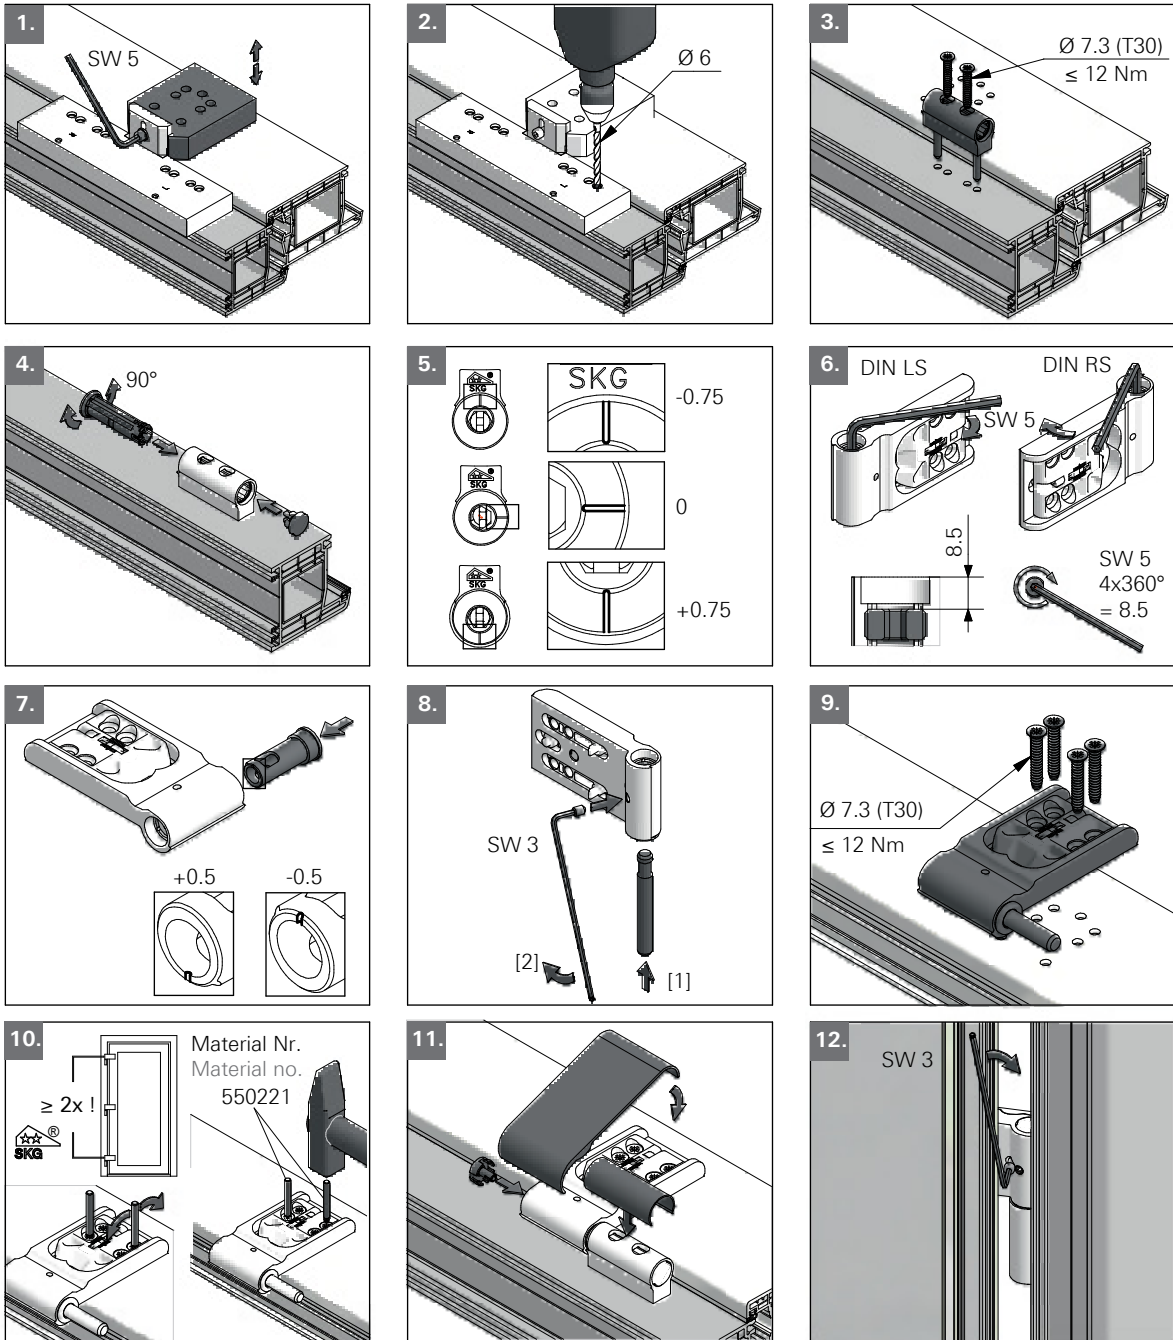

Nastellen

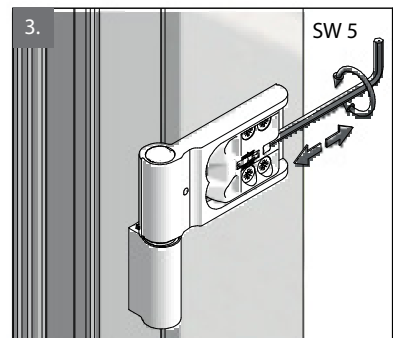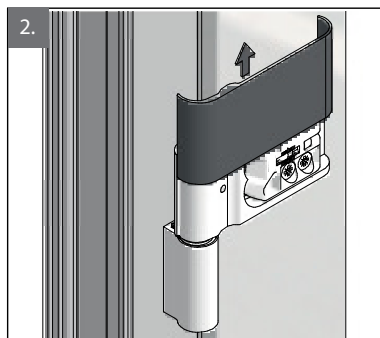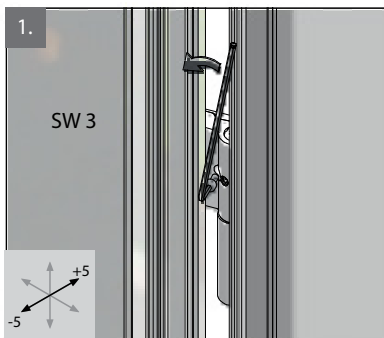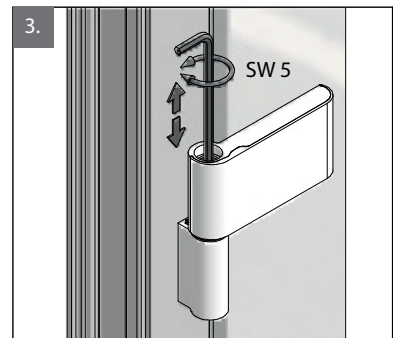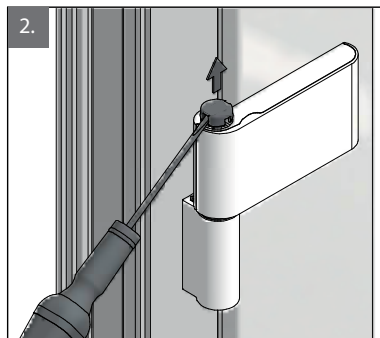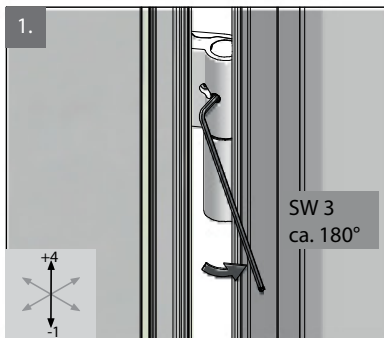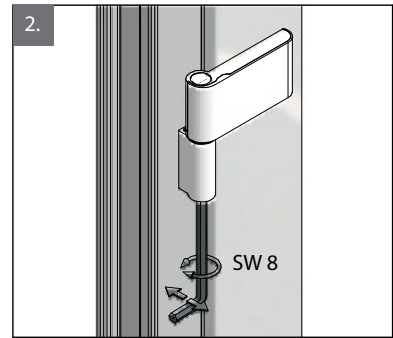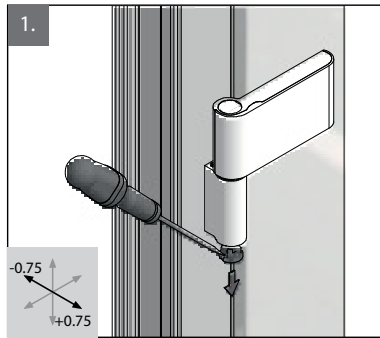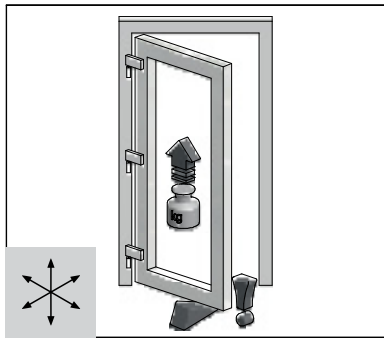

Demonteren

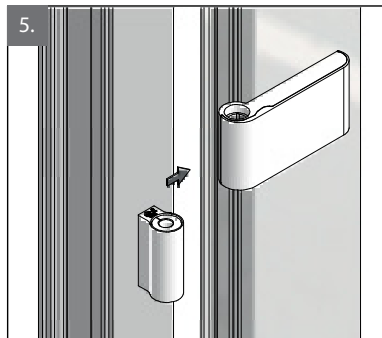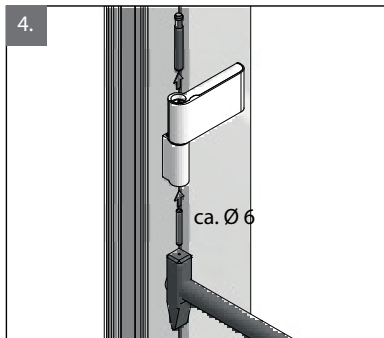
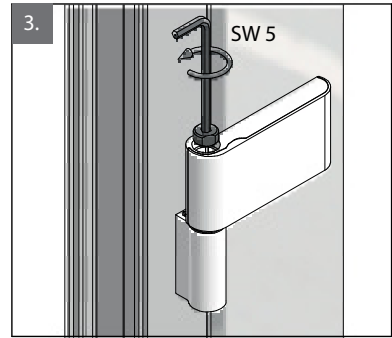
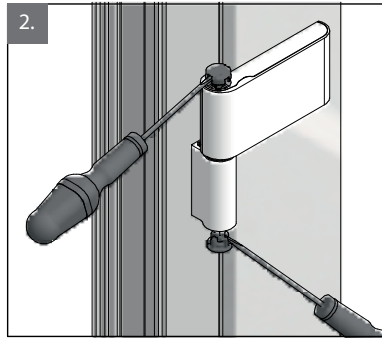


CE













Roto Frank AG 13 EN 1935:2002
 Eintrachstr. 95 1309
 42551 Velbert VE/Door/117H, 117NN/
 2-part door hinge, Nr. 001/CPR/2013-05-29
 for doors in emergency
 access routes
 117NN

EN 1935:2002	4	7	7	0	1	4	1	14
--------------	---	---	---	---	---	---	---	----










BUVA Atlas Poly Ultra buitendraaiend

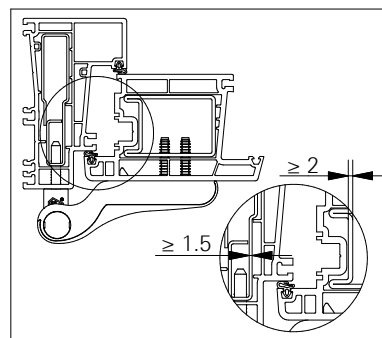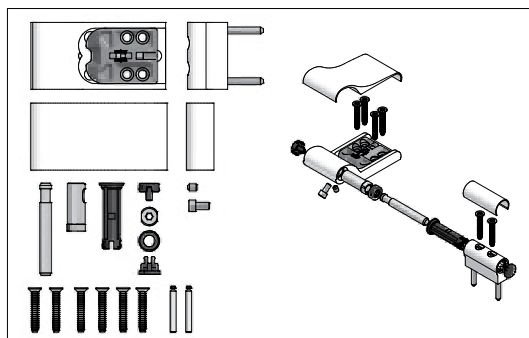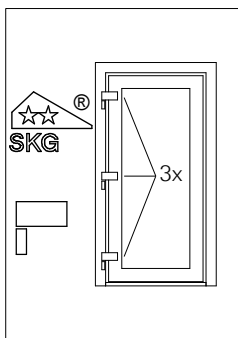






Montage

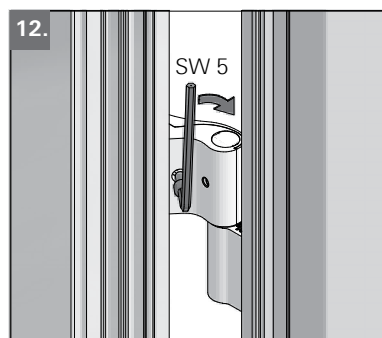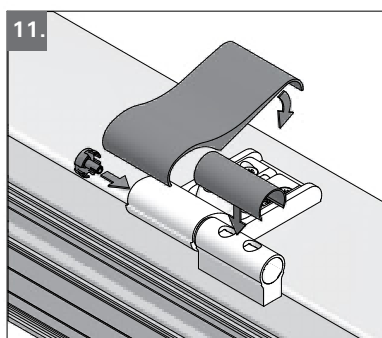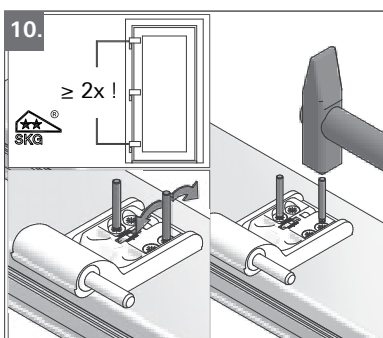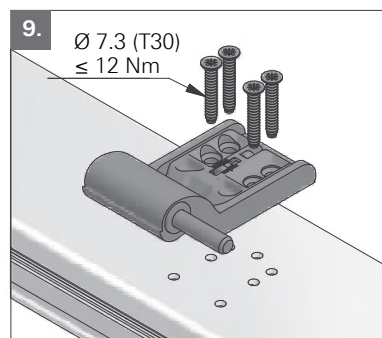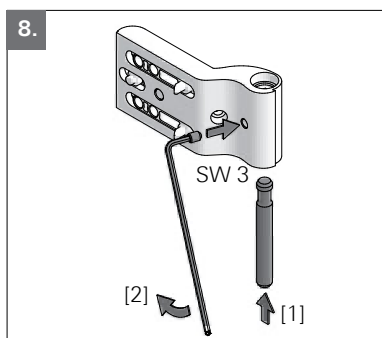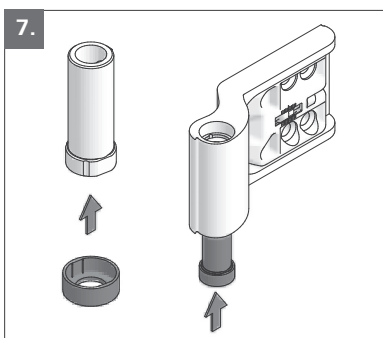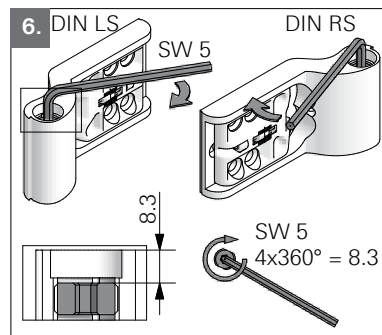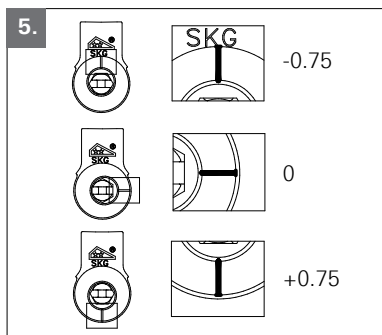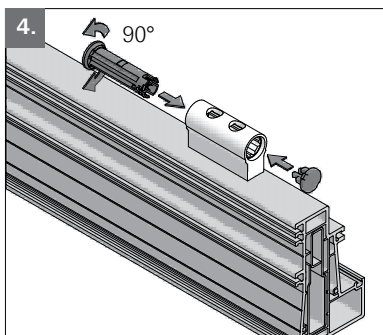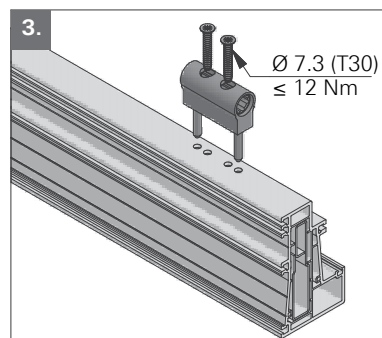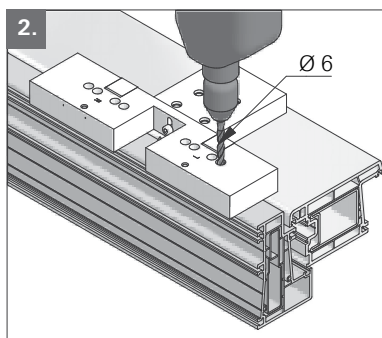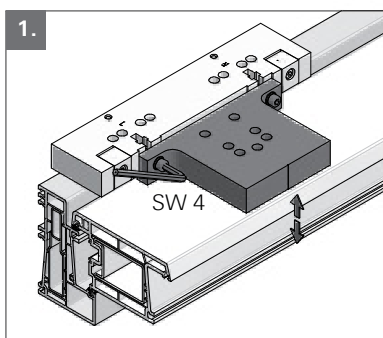

Nastellen

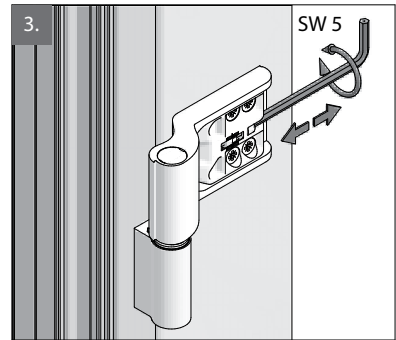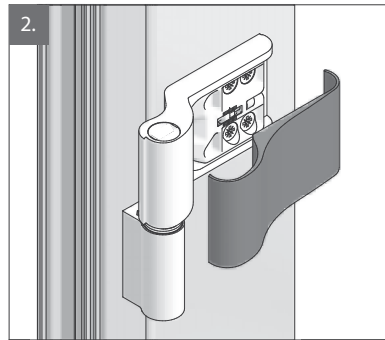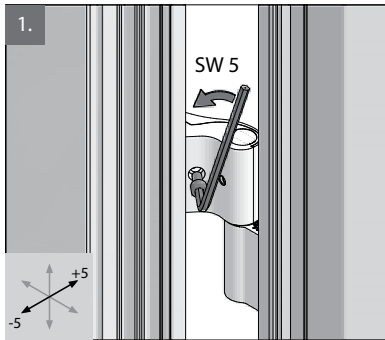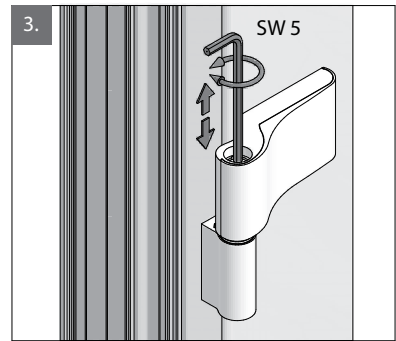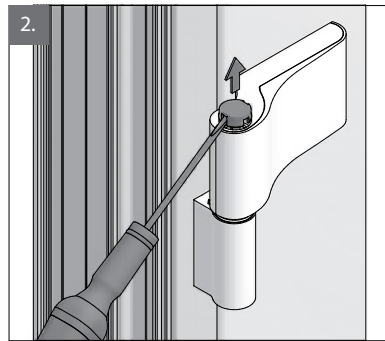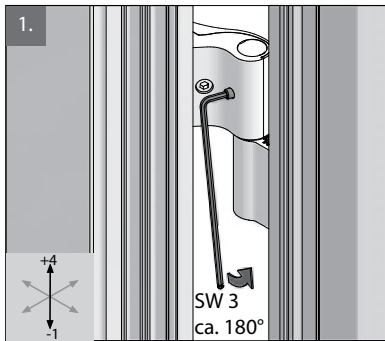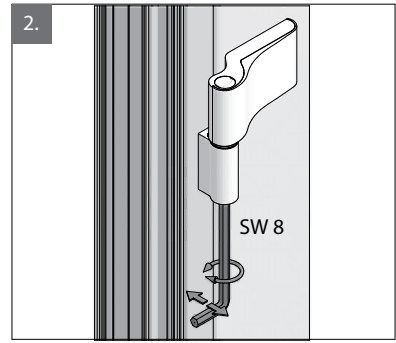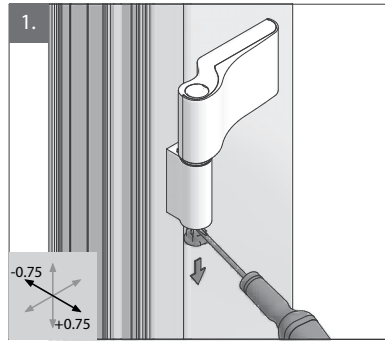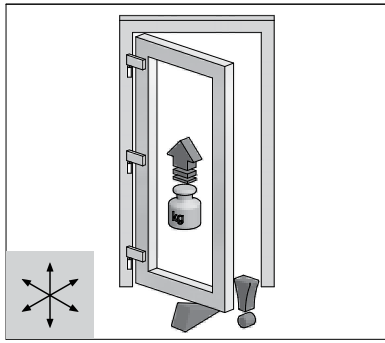

Demonteren

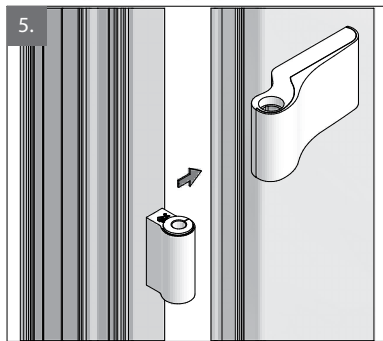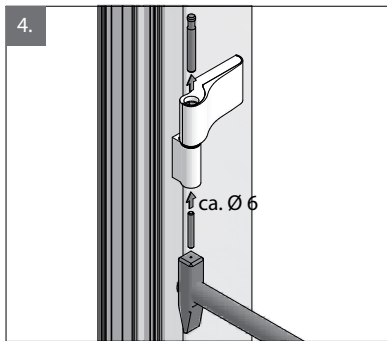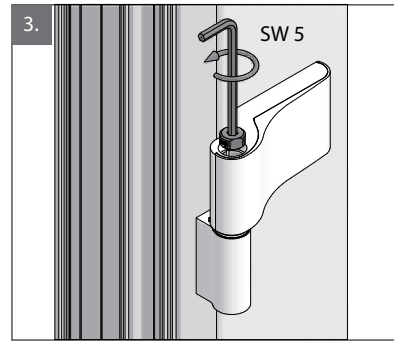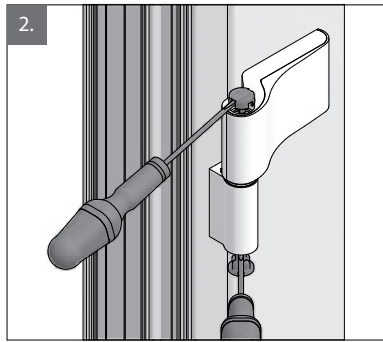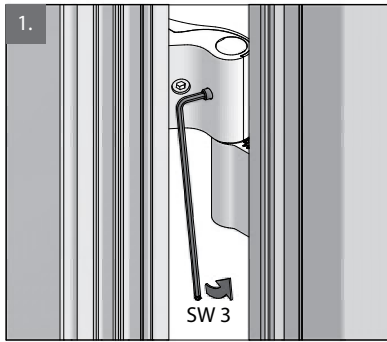

CE

Roto Frank AG 13 EN 1935:2002
 Eintrachstr. 95 1309
 42551 Velbert VE/Door/117H, 117NN/
 2-part door hinge, for doors in emergency
 access routes Nr. 001/CP/2013-05-29
 117H

EN 1935:2002	4	7	7	0	1	4	1	14
--------------	---	---	---	---	---	---	---	----